
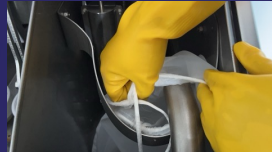


Clean the Internal


Clean the Filter Bag

- Open the drain valve and use the drainage pipe to empty the water tank.
- Lift the water tank cover to ensure the support rods are correctly positioned.
- Remove the filter bag, empty it, and rinse thoroughly.

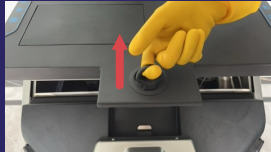


Clean the Filter Cap

- Rotate the two filter caps counterclockwise to unscrew and remove them.
- Take out the internal filters and rinse them thoroughly with clean water.

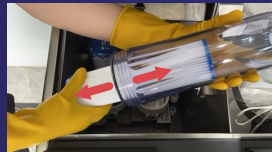


Clean the Filter Cartridge

- Use a water gun to thoroughly rinse the filter cartridge inside the clean water tank.
- Use a water gun to wash the filter cartridge inside the dirty water tank.

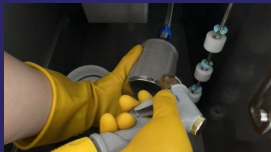



Rinse the Water Tank

- Employ a water gun to cleanse the interior walls and water level indicator of the water tank.
- Utilize a long-handled brush to scrub the bottom of the water tank.
- Shift the dirty water to the far end and drain it through the drainage outlet.

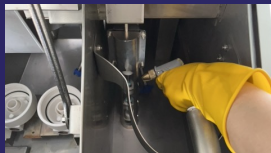

Flush the Dirty Water Suction Pipe

- Detach the lower suction pipe's mouth from the bend pipe of the water suction scraper.
- Position the water gun in the metal pipe opening of the dirty water tank.
- Rinse for approximately 15 seconds, and then reinstall the lower suction pipe.

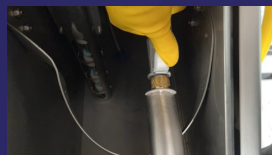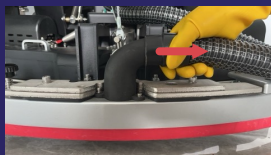

Clean the Bottom


Clean the Disc Brush

- Depress with one hand to detach the disc brush or scouring pad.
- Rinse and cleanse the disc brush or scouring pad.
- Grasp the disc brush and reinstall it securely.



Clean the Debris Tray

- Lift the horizontal quick clamp to unlock.
- Pull the debris tray handle to detach the debris tray.
- Empty the tray and then reinstall it securely.

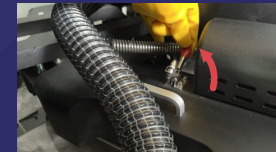


Clean the Roller brush

- Compress the roller brush at the near end and detach it from the far end.
- Clean the roller brush and remove any entangled material from the swivel wheel.
- Align the key at the near end and install it securely at the far end.



Clean the Fiber Broom (If Any)

- Clean foreign objects from the fiber broom bristles using a stiff brush.

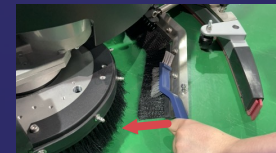

Clean the Squeegee

- Wipe the outer surface of the squeegee with a damp cloth.
- Clean the inner and outer side rubber strips of the squeegee.
- Remove foreign objects from the groove and bend pipe inside the squeegee.



Clean the Exterior

Wipe the Sensors

- Prepare a clean, soft cloth.
- Wipe each of the six cameras around the machine in sequence.
- Clean the LiDAR on the top and above the brush cover shell.



Wipe the Touchscreen

- Use a clean, soft cloth.
- Wipe the screen in circular motions from the center outward.



Wipe the Machine Body

- Prepare a slightly damp cloth.
- Wipe the exterior in a top-to-bottom sequence.
- Clean the brush cover shell.



Clean the Workstation

- Power off the workstation.
- Wipe the exterior with a slightly damp cloth.
- Remove and rinse the filter in the water collection tray.

